



232 Branford Rd.
North Branford, CT 06471
Orders: 203.481.9460
Tech: 203.481.9943
Fax: 203.481.9641

Product Instructions

#20-937P34 and #20-937P36

- 1.** Our Coyote block windage tray / pickup combo mounts by sandwiching between the block and the oil pan mounting rail. Start installation by test fitting your tray with your blocks pan mounting holes. Using the provided mounting studs (8MM - 1.25 x 35mm) on your block. The pickup tube install flange should press into the rubber grommet on your oil pump.
- 2.** After dry fitting the windage tray, remove from the block and put a thin coat of RTV Sealant between the block and the windage tray.
- 3.** Place the windage tray back on the block and add a thin coat of RTV on the other side of the windage tray before installing the oil pan gasket.
- 4.** Place a thin coat of RTV between the oil pan gasket and oil pan. After pan is fitted, torque the hardware to the necessary specs (25 lbs) in a criss-cross fashion.
- 5.** Let the oil pan and windage tray sit overnight before filling with oil. Inspect for any leaks.

