



**AEROMOTIVE**  
**Part # 18071, 18072, 18073, and 18074**  
**82-92/93-97 Camaro Fuel Pump Hanger and Pump**  
**INSTALLATION INSTRUCTIONS**

This product is not legal for sale or use on emission-controlled vehicles except when used as a direct replacement part matching OEM specification.

**WARNING!**



Always be aware of flammable situations. Drilling and grinding can be potential ignition sources. Extinguish all open flames, prohibit smoking and eliminate all sources of ignition in the area of the vehicle and workspace before proceeding with the installation. Ensure you are working in a well ventilated area with an approved fire extinguisher nearby.

**WARNING!**



Installation of this product requires modification to a fuel tank/ the fuel system, failure to satisfy all safety considerations will result in fire, explosion, injury and/or loss of life to yourself and/or others. All fuel system components **MUST** be located as far from heat sources as possible, like exhaust, engine block, etc.

**WARNING!**



Mechanical and hydraulic lifting devices can tip over or lower accidentally due to incorrect maneuvering or technical errors. A falling object can cause injury and/or loss of life to yourself and/or others. When working under the vehicle, always use stands, and ensure that the ground or floor is stable and level. Never crawl under a vehicle which is only supported by a jack.

**WARNING!**



The fuel system is under pressure. Do not open the fuel system until the pressure has been relieved. Refer to the appropriate vehicle service manual for the procedure and precautions for relieving the fuel system pressure.

**CAUTION!**



When installing this product always wear safety glasses and other appropriate safety apparel. A drilling operation will cause flying metal chips. Flying metal chips can cause eye injury.

**CAUTION:**



Installation of this product requires detailed knowledge of automotive systems and repair procedures. We recommend that this installation be carried out by a qualified automotive technician. Careless installation of this product can result in damage to the product, injury or loss of life to yourself and/or others.

## Compatible Fuels:

Pump Gas  
Race Gas  
E85  
Alcohol/Ethanol

### This kit contains the following parts:

- 1 ea Fuel Pump and Hanger Assembly (18071/18072 PN's – 200lph pump), (18073/18074 PN's – 340lph pump)
- 1 ea Locking Ring
- 1 ea Locking Ring Gasket

### Additional recommended parts:

- 1 ea 10-m fuel filter such as PN 12347 for AN-06 fuel lines (EFI) or P/N 12377 for AN-08 fuel lines (carbureted).
- 1 ea Bypass fuel pressure regulator such as PN 13303 for EFI applications or PN 13304 for carbureted engines.
- 1 ea Fuel Pump wiring kit such as PN 16307.

**Note: Some OEM fuel filler caps will not fit this tank; a replacement cap that fits this tank (if needed) is Stant PN: 10817.**

### The following steps are typical of most installations:


1. Once the engine has been allowed to cool, disconnect the negative battery cable and relieve the fuel system pressure.
2. Raise the vehicle and support it with jack stands.
3. Referring to the appropriate vehicle service manual for instructions, drain and disconnect any fuel and electrical component connections and remove the OEM fuel tank. The removal of the vehicles exhaust system may be necessary for fuel tank removal.
4. Remove the old OEM fuel pump and hanger assembly.
5. Place the locking ring gasket in the receiver groove on the tank.
6. Place the new Aeromotive fuel pump assembly in the tank. Install the pump assembly first by inserting the sending unit float through the hole, then carefully insert the rest of the assembly with the pump end of the assembly being held as high as possible in the tank, then set the outlet cap down on the locking ring gasket. It is important to keep the pump end high in the tank during installation so the pump and fuel level sender float land within the welded internal baffle and not in front of it. If the pump or fuel level sender float are not positioned correctly in the baffle the fuel level will not read correctly. **Note: It is helpful to install the fuel pump locking ring over the fittings/outlet cap before fully inserting the pump assembly in the tank.**



7. Ensure that the fuel pump locking ring gasket is still positioned properly in the receiver groove and then install the locking ring. **Note the orientation of the outlet cap fittings in the following image, the fittings need to point towards the front of the tank to ensure the sending unit arm and pump are positioned correctly in the tank.**



8. Connect the supply and return fuel lines to the new Aeromotive fuel pump assembly. The supply and return fittings are AN-06 male flare and will require AN-06 female hose ends. The vent port is a 3/8" hose barb in which the OEM vent hose can reattach to. Note: AN-08 lines will be required for carbureted applications; AN-06 or AN-08 lines may be used for EFI applications.

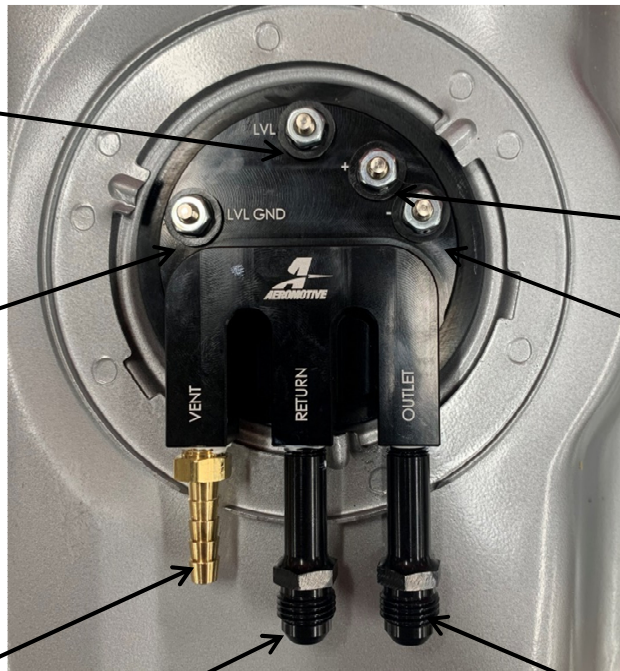

Fuel Level Terminal "LVL"  
(Connect OEM Fuel Level Wire To This Terminal)

Fuel Level Ground "LVL GND"  
(Connect Provided Ground Wire From LVL Ground Terminal To Clean Chassis Ground, **DO NOT SHARE LVL GROUND WITH PUMP**)

Pump Positive (+) Terminal


Pump Negative (-) Terminal

Vent Port 3/8" Hose Barb

Return Port AN-06 Male Flare

Outlet Port AN-06 Male Flare

9. Connect power to the fuel pump terminals as shown in the following diagram.

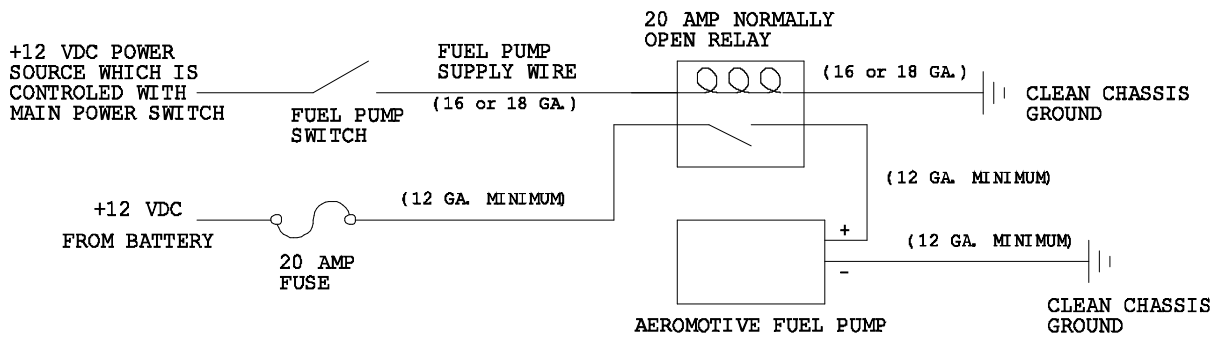

10. Position the fuel tank under the vehicle, double check that the locking ring and all fuel line and electrical connections are tight and secure.

11. Reinstall the fuel tank. Ensure that all wires and hoses are not pinched or in a bind before tightening the fuel tank straps.

12. Make any line or electrical adjustments necessary to clear the vehicles exhaust, suspension, and drivetrain components.
13. **Ensure that any spilled gasoline and any gasoline soaked shop towels are cleaned up and removed from the vicinity of the vehicle!**
14. Carefully lower the car onto the ground.
15. Fill the fuel tank with gasoline and check for any leaks in the system, if any leaks are found repair immediately.
16. **CAUTION: While performing the following steps, if any fuel leaks are detected, immediately turn the ignition of OFF, remove any spilled fuel and repair the leak(s) before proceeding!**
17. Reconnect the battery and turn the ignition to the ON position **WITHOUT** starting the car. After several seconds, check the fuel pressure. If there is no fuel pressure, turn the ignition key to the OFF position, wait one minute, return the ignition to the ON position, and recheck the fuel pressure. Repeat this ignition OFF and ON procedure until the fuel pressure gauge registers fuel pressure.
18. **With the fuel pressure gauge registering fuel system pressure, again check for fuel leaks throughout the entire fuel system! If any fuel leaks are found, turn the ignition key to the OFF position, remove any spilled fuel and repair the leak before proceeding!**
19. Test drive the car to ensure proper operation and re-check the fuel system for leaks. **If any leaks are found, immediately discontinue use of the vehicle and repair the leak(s)!**

# Contact Us

RGA NUMBER REQUIRED FOR ALL RETURNS TO AEROMOTIVE.

To obtain an RGA number, please call (913) 647-7300 and ask for the Returns and Repairs department or complete the online form under the "Rebuilds" section at [www.aeromotiveinc.com](http://www.aeromotiveinc.com).

- **Shipping & Returns**  
Aeromotive Inc.  
11414 W 79th Street.  
Lenexa, KS 66214

**General Inquiries and Tech Line:** (913) 647-7300

**General Email:** [info@aeromotiveinc.com](mailto:info@aeromotiveinc.com)

**Tech Email:** [tech@aeromotiveinc.com](mailto:tech@aeromotiveinc.com)

*The Aeromotive Tech Lines are open Monday through Friday from 9:30AM to 5:00PM Central Standard Time.*



**WARNING:** This product can expose you to chemicals, including chromium, which is known to the State of California to cause cancer or birth defects or other reproductive harm. For more information, visit: [www.p65Warnings.ca.gov](http://www.p65Warnings.ca.gov)

### ***AEROMOTIVE, INC. LIMITED WARRANTY***

This Aeromotive Product, with proof of purchase dated on or after January 1, 2003, is warranted to be free from defects in materials and workmanship for a period of one year from the original date of purchase. No warranty claim will be valid without authentic, dated proof of purchase.

This warranty is to the original retail purchaser and none other and is available directly from Aeromotive and not through any point of distribution or purchase.

If a defect is suspected, the retail purchaser must contact Aeromotive directly to discuss the problem, possible solutions and obtain a Return Goods Authorization (RGA), if deemed necessary by the company. Please call 913-647-7300 and dial option 3 for the technical service dept. All returns must be shipped freight pre-paid to the company and with valid RGA before they will be processed.

Aeromotive will examine any product returned with the proper authorization to determine if the failure resulted from a defect or from abuse, improper installation, misapplication or alteration. Aeromotive will then, at it's sole discretion, return, repair or replace the product.

If any Aeromotive product is determined defective, buyer's exclusive remedy is limited in value to the sale price of the good. In no event shall Aeromotive be liable for incidental or consequential damages.

Aeromotive expressly retains the right to make changes and improvements in any product it manufactures and sells at any time. These changes and improvements may be made without notice at any time and without any obligation to change the catalogs or printed materials.

Aeromotive expressly retains the right to discontinue at any time and without notice any Aeromotive product that it manufactures or sells.

This warranty is limited and expressly limits any implied warranty to one year from the date of the original retail purchase on all Aeromotive products.

No person, party or corporate entity other than Aeromotive shall have the right to: determine whether or not this Limited Warranty is applicable to any Aeromotive product, authorize any action whatsoever under the terms and conditions of this Limited Warranty, assume any obligation or liability of any nature whatsoever on behalf of Aeromotive under the terms and conditions of this Limited Warranty.

This Limited Warranty covers only the product itself and not the cost of installation or removal.

This Limited Warranty is in lieu of and expressly excludes any and all other warranties, expressed or implied. This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.